

Operation & Maintenance Manual

*Please read and save this manual.
Follow all safety instructions.*



SaniCart™

Portable Sanitation Station



SaniCart™

Portable Sanitation Station

TABLE OF CONTENTS

Safety	1-2
---------------	------------

Features	3-6
-----------------	------------

Operation	7-8
------------------	------------

Maintenance	9
--------------------	----------

Troubleshooting	9
------------------------	----------

Warranty Information	10
-----------------------------	-----------

SAFETY WARNINGS

All personnel should be alerted to the hazards indicated by the product safety labeling on the unit.

To prevent injury, basic precautions should be observed, including the following:

SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL

(DO NOT DISCARD)

- The unit is to be used indoors only
- Do not modify the unit in any way
- Use the product for its intended purpose only
- Power supplied to the unit **MUST** match the requirements of the unit
- Do not operate the unit if any damage is apparent to the box or power cord


CAUTION

It is the user's responsibility to determine and validate the suitability of this equipment for use in their process or system.


No warranty or representation is made by the manufacturer with respect to suitability or performance of this equipment or to the results that may be expected from its use.

The user should inspect the unit from time to time, clean as necessary and assure that all safety labels are intact and legible. Contact the factory if replacement labels are required.


Features

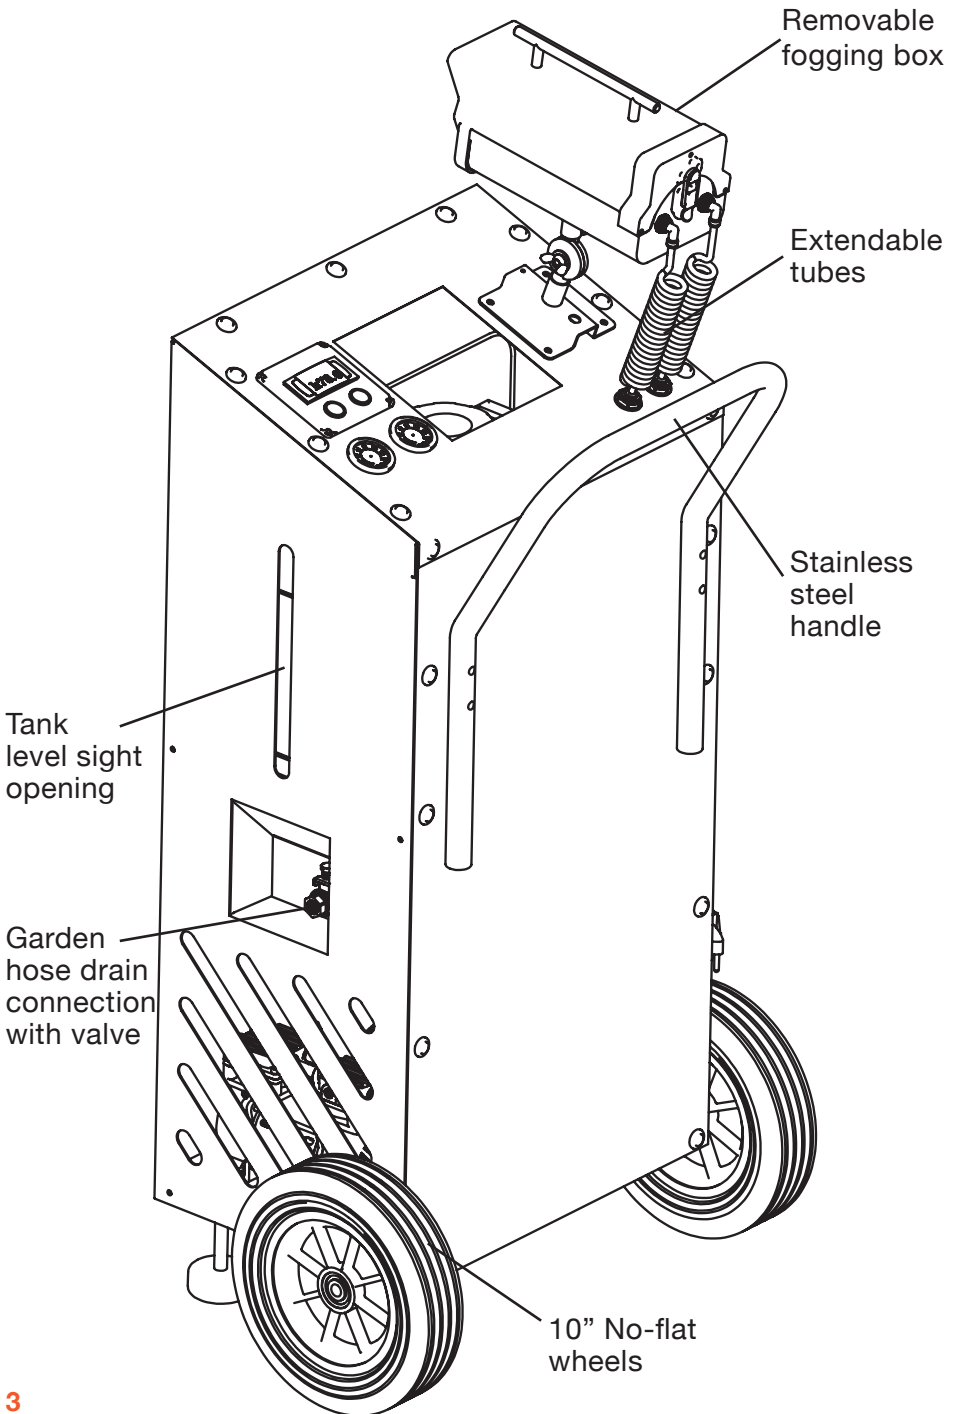


Features

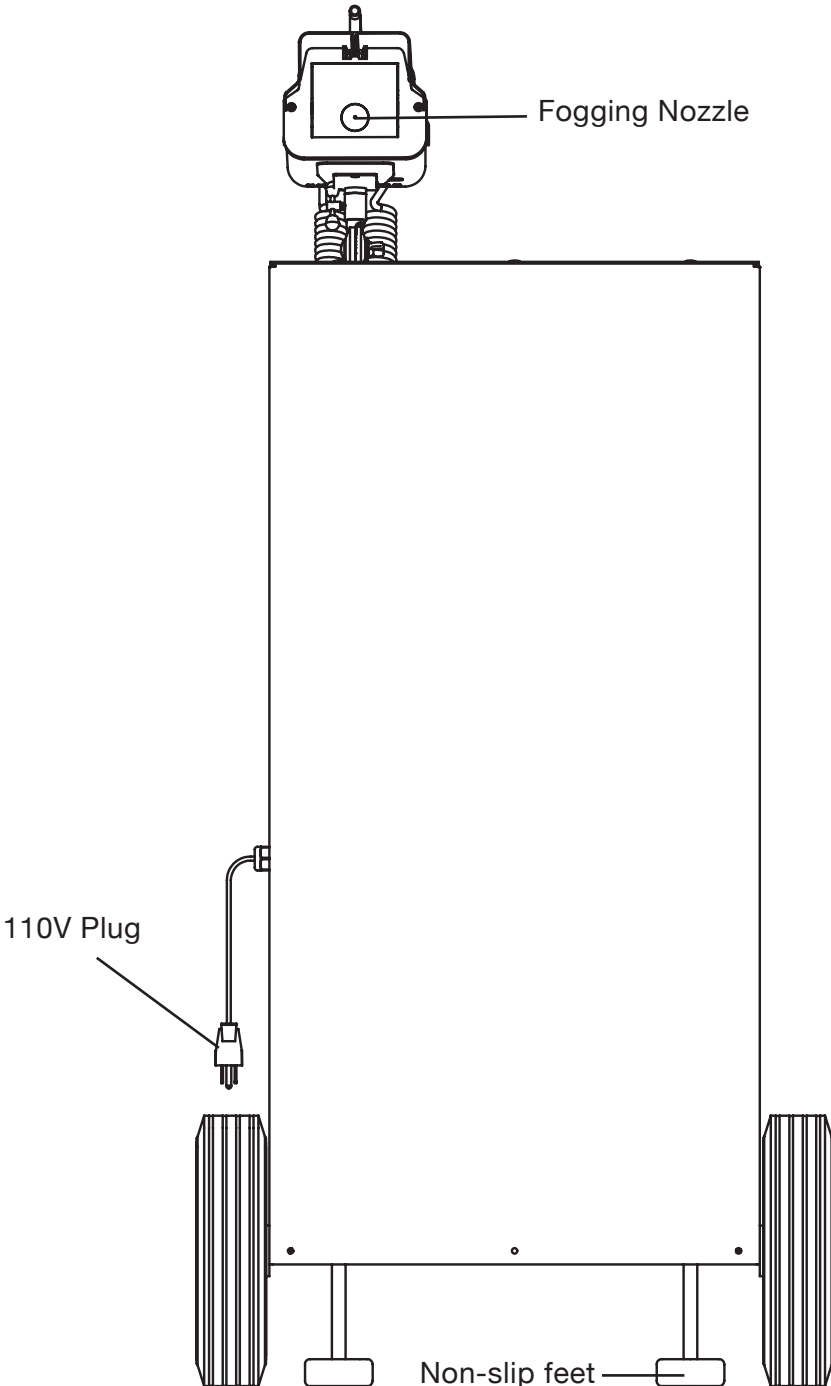

Features

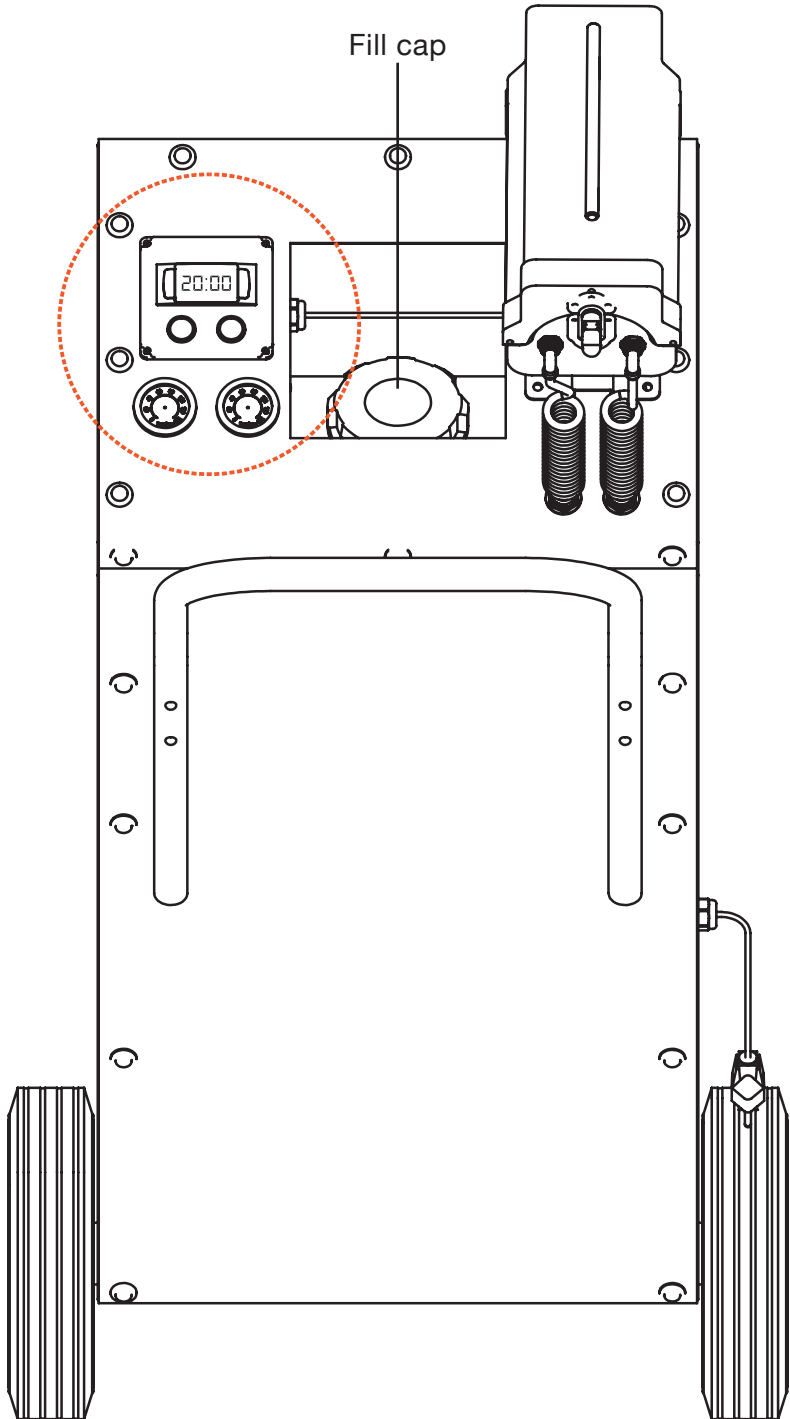


Features

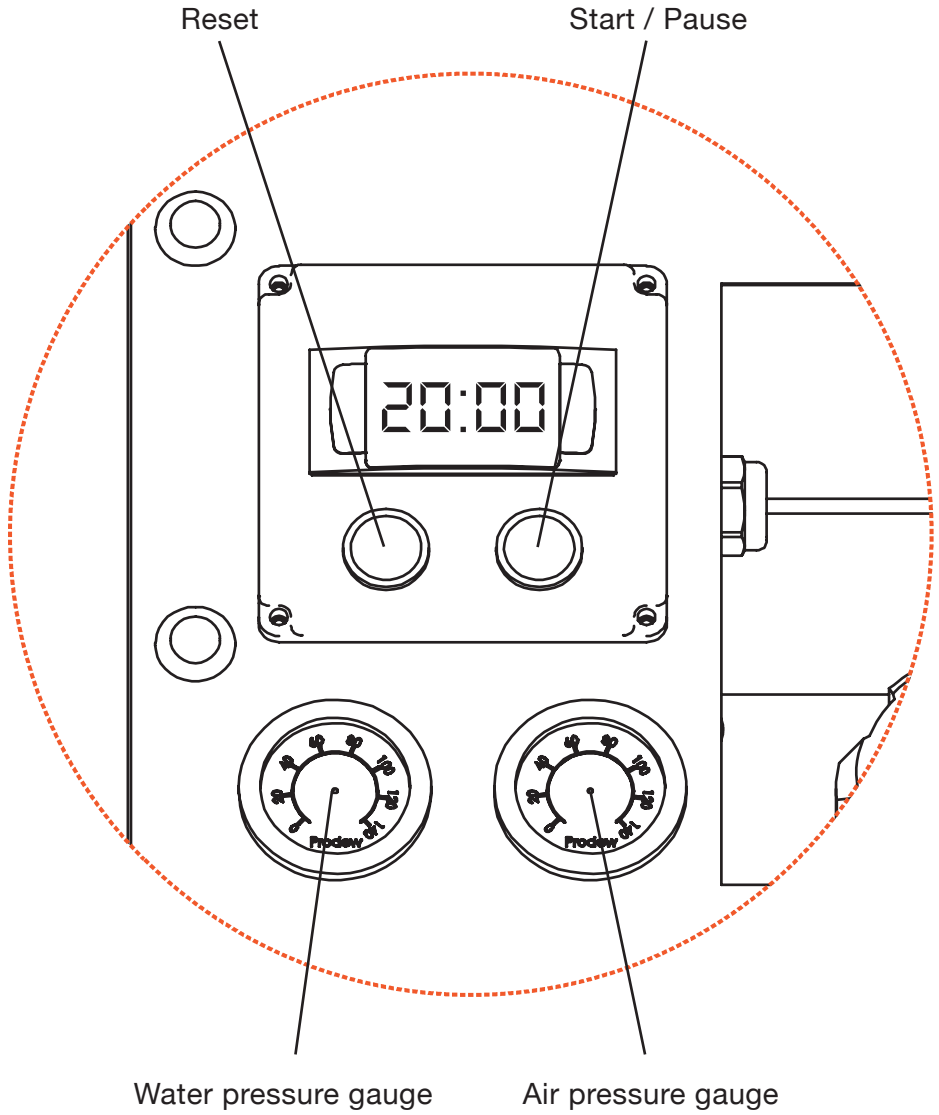 


Operation

 - 1 Remove fill cap and fill the 5 gallon tank with desired water mixture, replace cap.

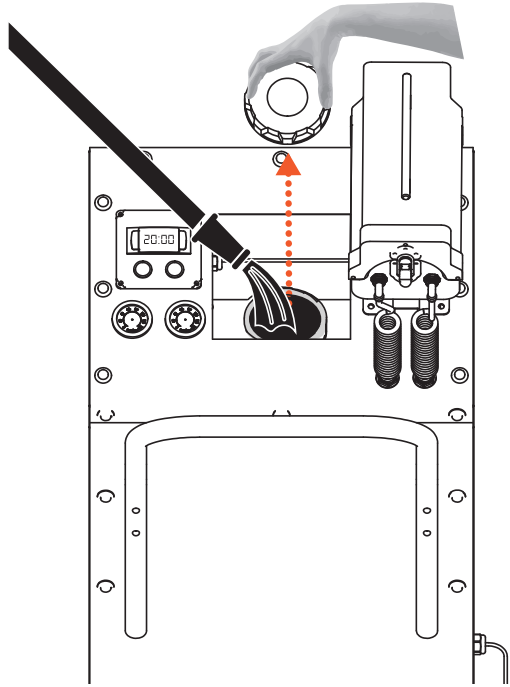

 - 2 Place the SaniCart in the location to be treated, and plug in to 110 VAC power source. Timer will illuminate and will display countdown time.

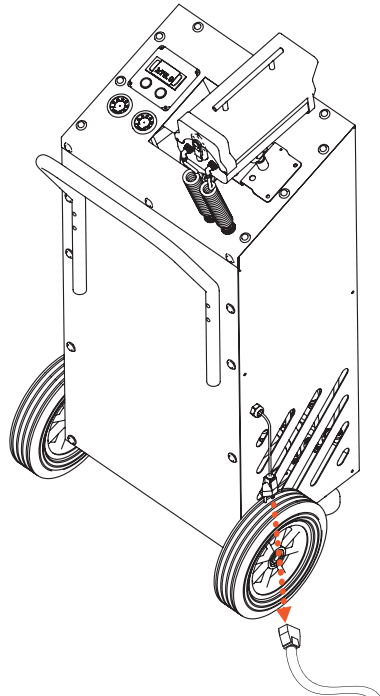

Operation (Timer Adjustment)

3

Quick Access
Menu Key (Flatec)

Set key




Upper Key

Lower Key
(Reset)


A

Press (**MENU KEY** ↻) and SET will appear.

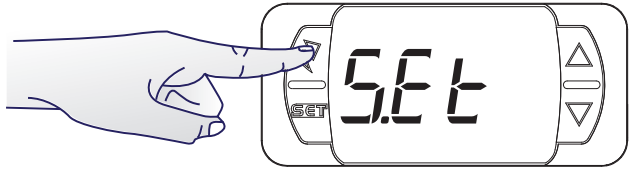


B

When Numbers displayed use (**UP/**
DOWN ⬆) arrows to
adjust to desired timing.

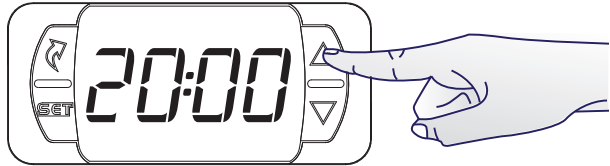


C

When time is selected
press (**SET**). Timer will
- - - - and the program
is ready to run.

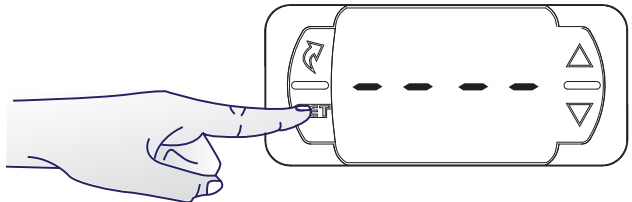

4

After the desired application
time has passed, turn the unit
off. The tank can be drained by
attaching a garden hose to the
tank drain valve.

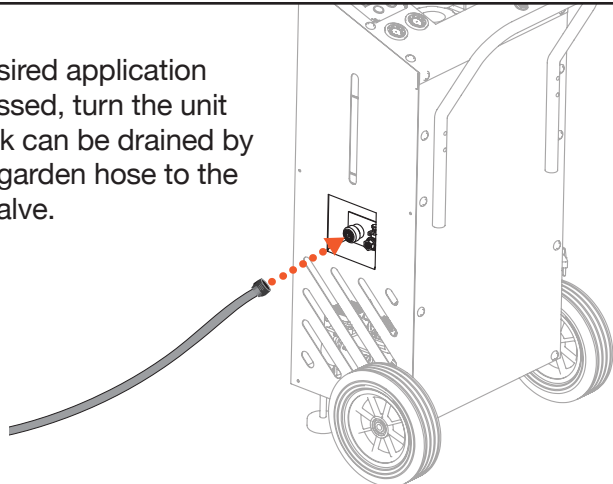

Maintenance

The Aguair SaniCart requires very little maintenance. Simply clean the exterior of the unit after each use to remove any fogging residue.

Rinsing of the tank with clean water periodically will also keep residue from building up.

Trouble shooting

Unit will not turn on, power light not lit

- Be sure power cord is plugged in, power available at receptacle
- Make sure the GFCI plug is not tripped; push reset if it is. If GFCI continues to trip, do not use unit, call Aguair for service.

Fogging cycles not correct

- Adjust On and Off time knobs to desired times. If timer does not change time periods, contact Aguair for service and parts.

Nozzle drips

- Nozzle will only drip if unit is turned off while the unit is fogging.
- If nozzle drips while in automatic mode, contact Aguair for service.

Parts Contact:

678.671.2757

844.993.3660 (toll free)

sales@aguair.com

Warranty

At Aguir, we are dedicated to providing innovative designs and well-made products to fit our customers' individual needs. If the product you purchase from us does not perform to the design specifications, we ask for the opportunity to make it right.

If you are still not satisfied, we will make adjustments according to our Limited Warranty and Exclusion of Remedies Policy.

LIMITED WARRANTY AND EXCLUSION OF REMEDIES

Preservation equipment and component parts distributed by Aguir LLC, its suppliers and agents, as well as new material furnished hereunder, is warranted against any defect in materials or service in accordance with factory recommendations providing that a claim, therefore, is made in writing within the limit set forth as 365 days from the date of invoice for parts and that either Aguir LLC or its Authorized Service Agency's examination, shall disclose to the Distributor's satisfaction to be thus defective.

AGUIR LLC'S OBLIGATION ON ANY CLAIM IS LIMITED TO REPLACEMENT OR REPAIR OF THE DEFECT OR MATERIAL F.O.B. FACTORY.

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, OF ANY NATURE WHATSOEVER, INCLUDING THE WARRANTY OF MERCHANTABILITY, EXCEPT AS SPECIFICALLY SET FORTH HEREIN.

Visit our website for more great products and solutions



[aguir.com](https://www.aguir.com)





Contact Us

1359 Gresham Road
Marietta, GA 30062

sales@aguair.com

678.671.2757 | 844.993.3660

[Aguair.com](https://aguair.com)