

SPECIFICATIONS

Model	WRD-5000
Part Number	10290MG-US
Height	11.5" (290 mm)
Width	23.5 (600 mm)
Depth	23.5 (600 mm)
Weight	40 lbs (18Kg)
Power	400W
Voltage	115 V
Airflow	2950 cfm (5000M ³ /h)
Fan Speed	1520rpm
Fan Blade Diameter	15.75" (400mm)
Noise Level	<70dbA
IP Rating	IP22



Whole Room Dryer 10290MG-US

USER MANUAL

SAFETY PRECAUTIONS

WARNING- THIS FAN IS NOT FLAMEPROOF

- ◆ **DO NOT** ALLOW CHILDREN TO PLAY WITH OR AROUND THE UNIT. ENSURE THE UNIT IS INACCESSIBLE TO CHILDREN WHEN NOT ATTENDED.
- ◆ **DO NOT** USE THIS UNIT IN AN ENVIRONMENT CONTAINING FLAMMABLE FUMES
- ◆ **DO NOT** USE THIS UNIT IF THE CABINET OR POWER CORD IS DAMAGED
- ◆ **DO NOT** INSERT OBJECTS INTO ANY OF THE GRILLES ON THE MACHINE
- ◆ **DO NOT** COVER OR OBSTRUCT AIRFLOW FROM THE GRILLES
- ◆ **DO NOT** OPERATE THE UNIT WITH THE COVERS REMOVED
- ◆ **DO NOT** ATTEMPT ANY REPAIRS SHOULD THE UNIT FAIL TO OPERATE
- ◆ **DO NOT** STAND ON THE UNIT
- ◆ **DO NOT** LIFT THE UNIT WHEN SWITCHED ON
- ◆ **DO** CHECK THE PLUG ON THE EQUIPMENT MATCHES THE SUPPLY
- ◆ **DO** USE THE UNIT FOR THE PURPOSE FOR WHICH IT WAS DESIGNED
- ◆ **DO** ENSURE THE POWER CORD AND SUPPLY IS EARTHED CORRECTLY
- ◆ **DO** USE A RESIDUAL CURRENT DEVICE "RCD" WHERE POSSIBLE
- ◆ **DO** KEEP THE UNIT DRY. NEVER USE A HOSE OR PRESSURE WASHER TO CLEAN THE UNIT.

CONTACT DETAILS

Telephone: (757) 873 6800
Fax: (757) 873 3632
Web: www.eipl.co.uk
Email: sales@ebacusa.com

Ebac Industrial Products Inc.
700 Thimble Shoals Blvd, Suite 109
Newport News, VA. 23606-2575



Drawing No. :- TPC345
Issue :- 2
Date :- 05/01/12

INTRODUCTION

The user manual tells you how to operate the WRD-5000. Please read thoroughly before operating the unit. If you have any questions please contact our Customer Service Department at the address shown at the back of this section or phone (757) 873 6800

IMPORTANT

Your WRD-5000 is packed in a plastic wrapping – please ensure that it is disposed of safely and where it will not be a danger to small children.

UNPACKING

Carefully remove the unit from its transit box and wrapping, and visually check for any signs of transit damage. If there are any signs of damage DO NOT attempt to operate the unit, call your supplier for advice. Retain the packaging for further use, or dispose of it considerately.

OPERATION

The WRD-5000 should only be operated in the horizontal position and with the unit standing on a firm, level floor.

The WRD-5000 is designed to blow large quantities of air across wet surfaces to speed up the drying process. The WRD-5000 should be positioned in the centre of the area to be dried. Connect the power cord to a suitable supply and the unit is ready for operation.

SWITCHING ON

The WRD-5000 ON/OFF switch is located on the side of the unit. To start the fan, set the switch to the ON position (I). Since the WRD-5000 has a considerably high suction, always ensure that the inlet grille is kept free of any obstruction during operation.

SWITCHING OFF

Set the ON/OFF switch to the OFF position (0). Turn off the power and disconnect. Do not use the supply cord to adjust or move the unit. Use the handle provided.

The unit is fitted with rubber feet to allow it to be stored in the vertical position.

ELECTRICAL CONNECTIONS

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW.....EARTH
WHITE.....NEUTRAL
BLACK.....LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your own plug, proceed as follows.

The wire which is coloured Green and Yellow must be connected to the terminal marked E or by the Earth Symbol or coloured Green or Green and Yellow. The wire which is coloured White must be connected to the terminal in the plug marked with the letter N. The wire which is coloured Black must be connected to the terminal which is marked with the letter L . You must safely dispose of the non rewirable plug once it has been removed from the flexible cord. It is dangerous to attempt to inset the plug into any electrical socket.

If the supply cord is damaged it must be replaced by qualified Ebac personnel or other similar qualified persons in order to avoid hazard.

SERVICE

Always turn off the power and unplug the unit before removing any guards. This machine should be serviced by qualified Ebac personnel or other persons having technical competence in servicing electrical equipment following the instructions in the Ebac Service Manual.

WARNING – THIS APPLIANCE MUST BE EARTHED